



EN – Stainless Steel Induction Moka Pot Silver – 4 Cups

PRODUCT NAME	Stainless Steel Induction Moka Pot Silver – 4 Cups
PRODUCT ID	2593
PRODUCT PHOTO	

PRODUCT DETAILS	
Product specification	Moka pot
Volume	4 cups
Material	Stainless steel
Intended type of food	Coffee
Status	Material intended for contact with food

INSTRUCTIONS FOR USE
1. Unscrew the pot and fill the lower part with water up to the vent. 2. Insert the filter, add ground coffee (do not tamp down) and clean the coffee residue off the sides if necessary. 3. Screw the pot back on and seal tightly. 4. Place on a moderately warm heatsource.

5. Once the coffee starts to pour out, remove the pot from the heat source.
6. Serve immediately.

MAINTENANCE AND CLEANING

- After use, allow to cool down completely.
- Disassemble the pot and remove used coffee grounds.
- Wash each part with warm water. Do not use detergents.
- Moka pot is not dishwasher safe.
- After cleaning, allow to dry completely.
- Keep disassembled or only lightly screwed.
- Check the rubber sealing and filter regularly.
- Once they start showing signs of use, replace the part with a new one.
- For cleaning, avoid aggressive detergents and sharp sponges.
- For a more thorough cleaning, use hot water and a soft brush.

SAFETY WARNING

- Pressure and hot steam build up during brewing — never open or loosen the pot until it has completely cooled down.
- Do not leave the moka pot unattended while heating.
- If the gasket or filter needs replacement, consult a qualified specialist.
- When removing the pot from the heat source, handle it carefully and hold it only by the handle.
- Never fill with water above the valve level.
- Do not use without the gasket, filter, and water properly in place.
- Do not use in a microwave oven.
- Use with caution — hot parts may cause burns.
- Do not use an overheated or damaged pot.
- Keep out of reach of children.
- Hot water poses a risk to both children and adults.